



### Connector: C-102

Terminal No.	Check item	Check condition	Normal condition
51	Glow indicator lamp <Diesel>	Ignition switch: ON and glow indicator lamp: OFF	System voltage
52	Charge warning lamp	Ignition switch: ON and before alternator generation and charge warning lamp: OFF	System voltage
53 - 55	-	-	-
56	Input of turn-signal lamp LH switch	Ignition switch: ON and turn-signal lamp (LH) switch: ON and turn-signal lamp: ON (turn: ON)	System voltage
57	Earth	Always	1 V or less
58	-	-	-
59	Over drive off indicator	Ignition switch: ON and over drive off switch: ON and over drive off indicator: ON	System voltage
60	A/T fluid temperature warning lamp	Ignition switch: ON and A/T fluid temperature warning lamp: OFF	System voltage
61	Oil pressure switch	Ignition switch: ON and before starting the engine and oil pressure warning lamp: OFF	System voltage
62	-	-	-
63	Check engine warning lamp	Ignition switch: ON and check engine warning lamp: OFF	System voltage
64	Water separator indicator lamp <Diesel>	Ignition switch: ON and water level switch: ON and water separator indicator lamp: ON	1 V or less

### Connector: C-103

Terminal No.	Check item	Check condition	Normal condition
31	Shift indicator - L	Ignition switch: ON and shift lever is in L position	System voltage
32, 33	-	-	-
34	Tachometer (engine speed)	-	-
35	Speedometer (vehicle speed)	-	-
36	Power supply from ignition switch (IG1)	Ignition switch: ON	System voltage
37	Shift indicator - 2	Ignition switch: ON and shift lever is in 2 position	System voltage
38	Shift indicator - D	Ignition switch: ON and shift lever is in D position	System voltage
39	Shift indicator - N	Ignition switch: ON and shift lever is in N position	System voltage
40	Shift indicator - R	Ignition switch: ON and shift lever is in R position	System voltage
41	Shift indicator - P	Ignition switch: ON and shift lever is in P position	System voltage
42	Battery power supply	Always	System voltage

### Connector: C-104

Terminal No.	Check item	Check condition	Normal condition
1	-	-	-
2	Door ajar warning lamp	Ignition switch: ON and door is open and door ajar warning lamp: ON	1 V or less
3	Rear differential lock mode	-	-
4	2WD mode	-	-
5	-	-	-
6	Centre differential lock mode	-	-
7	-	-	-
8	4WD indicator lamp	Ignition switch: ON and 4WD indicator lamp: OFF	System voltage
9, 10	-	-	-
11	Input of front fog lamp indicator lamp	Illumination switch: ON and Ignition switch: ON and front fog lamp switch: ON and front fog lamp indicator: ON	System voltage

12	Input of parking brake switch and brake fluid level switch	Ignition switch: ON and parking brake switch: ON Ignition switch: ON and brake fluid level switch: ON Ignition switch: ON and vacuum switch: ON Brake warning lamp: ON	1 V or less
13	Earth	Always	1 V or less
14	-	-	-
15	Illumination (earth)	Always	1 V or less
16	Illumination (power supply)	Illumination switch: ON and lighting switch: ON	System voltage
17	Brake warning lamp	Ignition switch: ON and brake warning lamp: ON	1 V or less
18	SRS air bag warning lamp	Ignition switch: ON and SRS air bag warning lamp: ON	System voltage
19	ABS warning lamp	Ignition switch: ON and ABS warning lamp: ON	1 V or less
20	-	-	-
21	Input of engine coolant temperature gauge	-	-
22	Input of fuel gauge	-	-
23	Input of turn-signal lamp RH switch	Ignition switch: ON and turn-signal lamp (RH) switch: ON and turn-signal lamp: ON (turn: ON)	System voltage
24	Input of high beam switch	Ignition switch: ON and high beam switch: ON and high beam indicator: ON (beam: ON)	System voltage